


Connecting the Power Inserter.

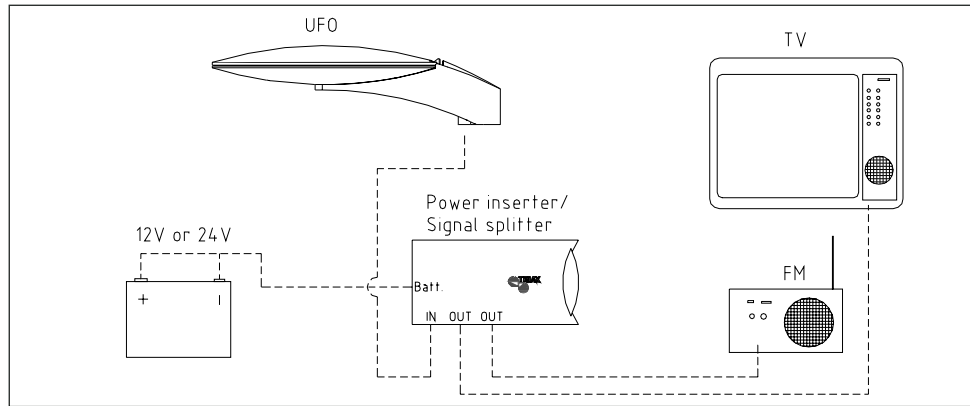

Troubleshooting guide

Problem	Possible reason	Solution
Weak or missing signal -check LED on power inserter -check LED on UFO both LED's must be ON for the UFO to work.	NO light indicates no voltage. Often this is caused by a short in one of the cable connectors.	Remove the cables one by one to find the defective one. Then repair or replace.
Interference. Herring-bone pattern. White horizontal stripes in the picture.	Interference is often caused by different electronic equipment - mobile phones, computers, transmitters -being used in close proximity to the UFO.	Increase distance - increase UFO height
Ghosting. Double pictures	Ghosting is caused by the TV signal being reflected from buildings, large ships etc.	Changing position a few meters will often solve the problem.

Contact info: www.triax.com

Technical data.

Description	
Type	Omnidirectional antenna for TV and radio reception with built-in amplifier .
Channels	TV Ch 2 - Ch 69 + FM
Reference No.	109680
Electrical data	
Frequency	45 - 860 MHz
Gain	28 dB
Noise figure	2,5 dB
Output voltage	108 dBµV
Return loss	>10 dB
Impedance	75 Ohm
Horizontal beamwidth	360 degrees
Power supply	12-24V /50mA



06-2003

896722D




UFO Marine Antenna

Assembly and mounting instructions
Montageanleitung
Notice de montage
Montagevejledning


Simply more
- more simply

TRIAx


Stripping cable. Screw-on F-connector.

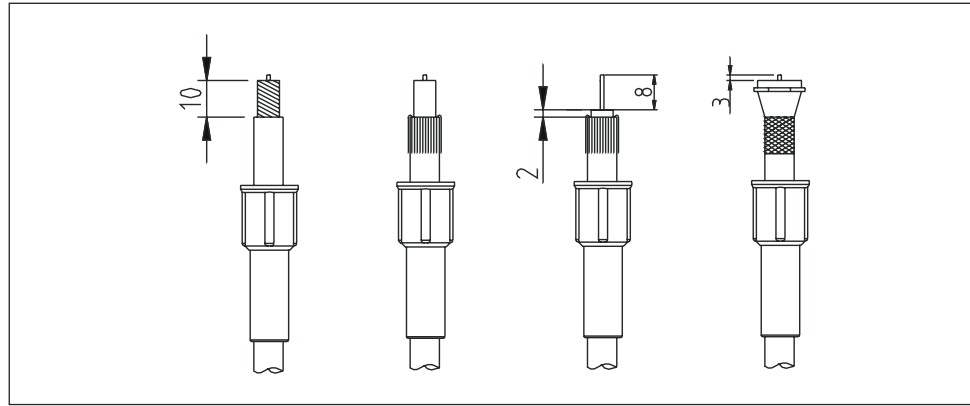


Centre mounted UFO.

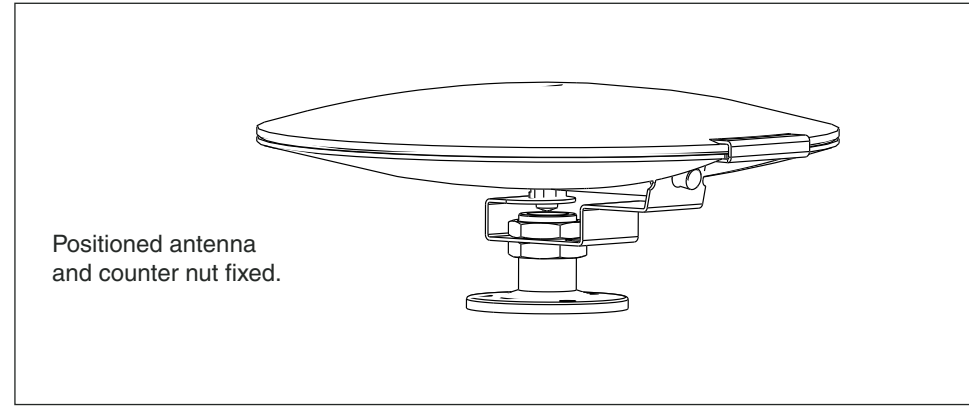


Connecting the cable. (Centre mounted UFO)

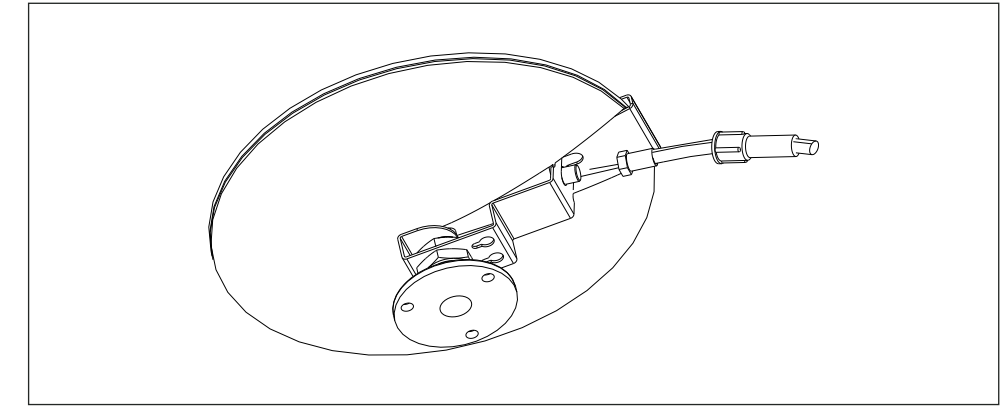


Mounting on a horizontal surface. (Standard UFO)

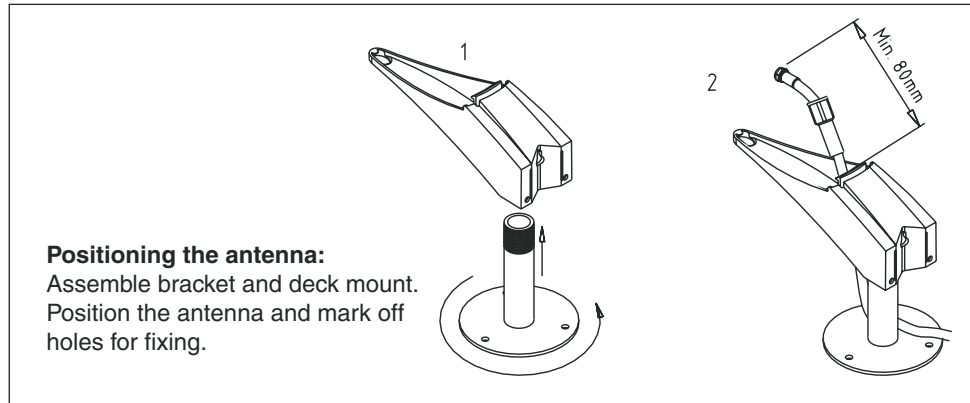


Mounting on mast. (Standard UFO)

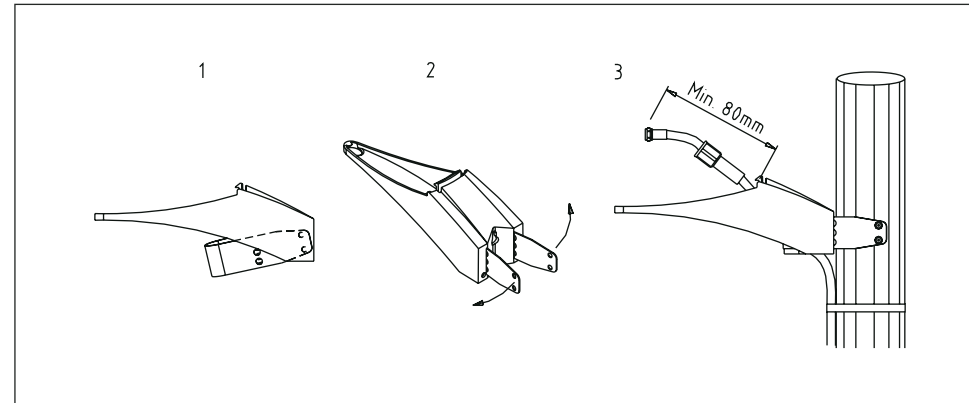


Mounting on a horizontal surface. (Standard UFO)

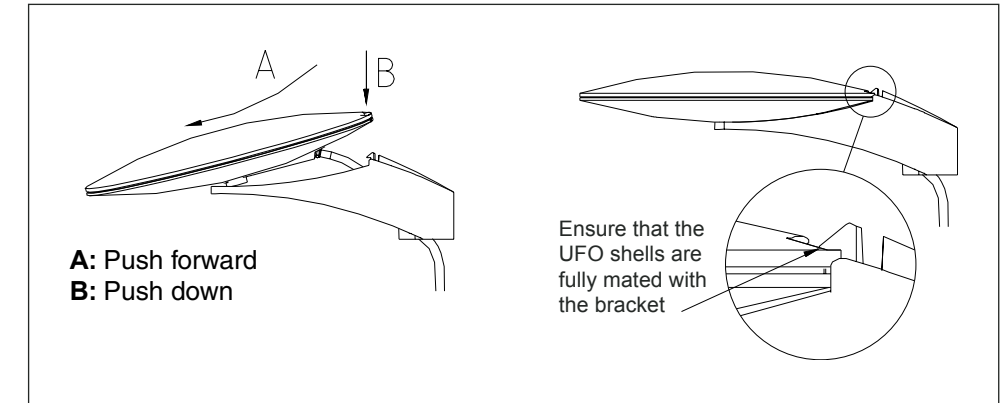

Centre mounted UFO.

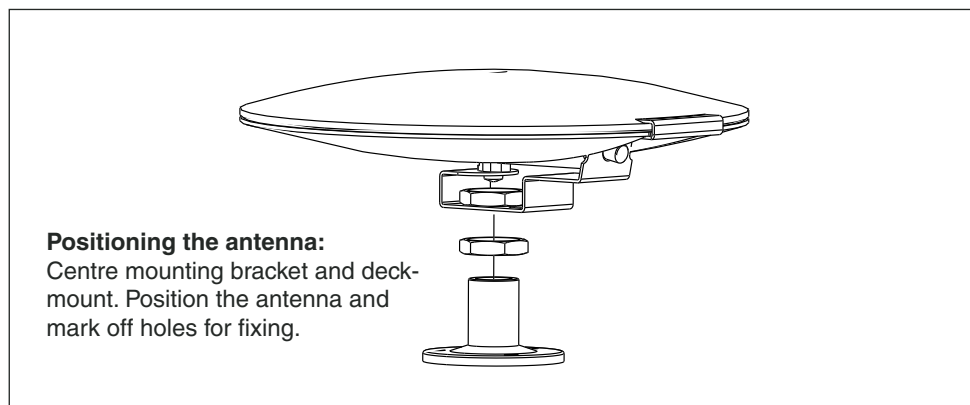

Connecting the cable. (Standard UFO)

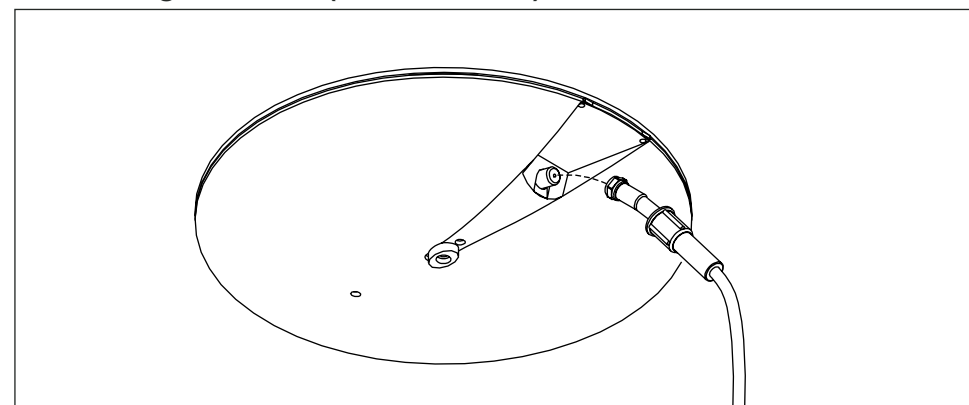

Screws for extra strength. (Standard UFO)

